

ALPHA1

Model B

Installation and operating instructions



English (GB) Installation and operating instructions

Original installation and operating instructions

These installation and operating instructions describe ALPHA1 model B.

Sections 1-5 give the information necessary to be able to unpack, install and start up the product in a safe way.

Sections 6-12 give important information about the product, as well as information on service, fault finding and disposal of the product.

CONTENTS

	Page
1. General information	2
1.1 Target group	2
1.2 Hazard statements	2
1.3 Notes	3
2. Receiving the product	3
2.1 Inspecting the product	3
2.2 Scope of delivery	3
3. Installing the product	3
3.1 Mechanical installation	3
3.2 Positioning the pump	4
3.3 Control box positions	4
3.4 Insulating the pump housing	5
4. Electrical installation	5
4.1 Assembling the plug	6
4.2 Dismantling the plug	6
5. Starting up the product	7
5.1 Before startup	7
5.2 First startup	7
5.3 Venting the pump	7
6. Product introduction	8
6.1 Product description	8
6.2 Applications	8
6.3 Pumped liquids	9
6.4 Identification	9
7. Control functions	10
7.1 Elements on the operating panel	10
7.2 Display	10
7.3 Light fields indicating the pump setting	10
7.4 Button for selection of pump setting	10
7.5 Control modes	11
7.6 Pump performance	13
8. Fault finding the product	14
9. Technical data	15
9.1 Data and operating conditions	15
9.2 Dimensions	16
10. Performance curves	17
10.1 Guide to performance curves	17
10.2 Curve conditions	17
10.3 Performance curves, ALPHA1, XX-40 (N)	18
10.4 Performance curves, ALPHA1, XX-50 (N)	19
10.5 Performance curves, ALPHA1, XX-60 (N), XX-50/60	20
10.6 Performance curves, ALPHA1, XX-80 (N)	21
11. Accessories	22
11.1 Unions	22
11.2 Insulating shells	23
11.3 ALPHA plugs	23
12. Disposing of the product	23

1. General information

1.1 Target group



Read this document and the quick guide before installing the product. Installation and operation must comply with local regulations and accepted codes of good practice.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

1.2 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



SIGNAL WORD

Description of hazard

Consequence of ignoring the warning.
- Action to avoid the hazard.

1.3 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

2. Receiving the product

2.1 Inspecting the product

Check that the product received is in accordance with the order.

Check that the voltage and frequency of the product match the voltage and frequency of the installation site. See section [6.4.1 Nameplate](#).

2.2 Scope of delivery

The box contains the following items:

- ALPHA1 pump
- ALPHA plug
- insulating shells
- two gaskets
- quick guide.

3. Installing the product

3.1 Mechanical installation

3.1.1 Mounting the product

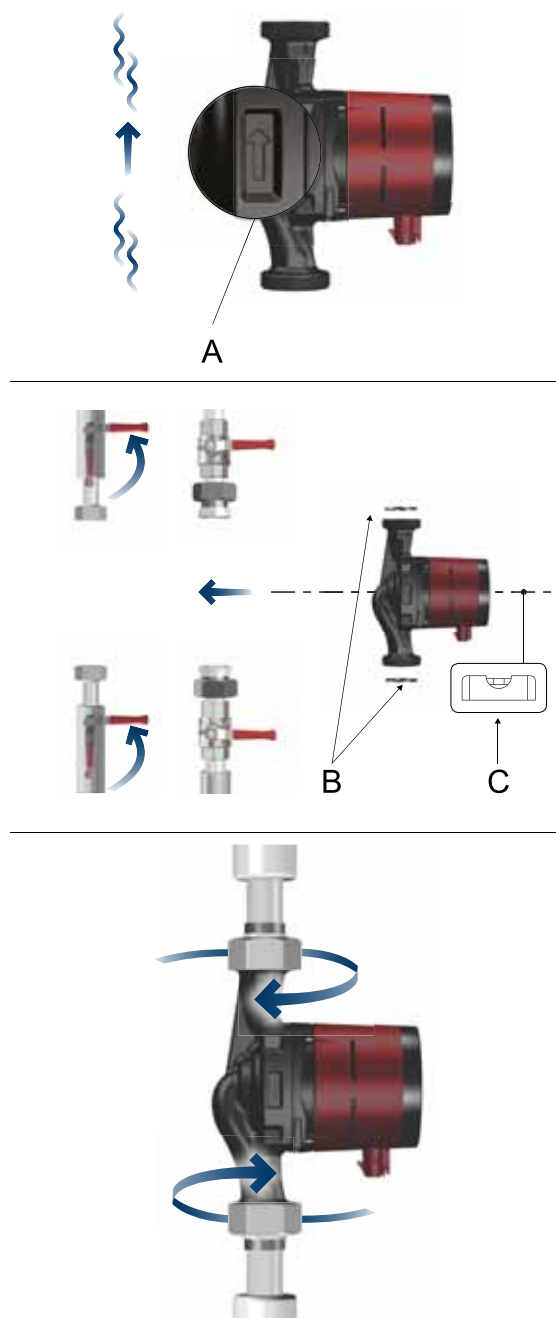


Fig. 1 Mounting the product

The arrows on the pump housing indicate the flow direction through the pump. See fig. 1 (A).

1. Fit the two gaskets when you mount the pump in the pipe. See fig. 1 (B).
2. Install the pump with a horizontal motor shaft. See fig. 1 (C). See also section [3.3 Control box positions](#).
3. Tighten the fittings.

3.2 Positioning the pump

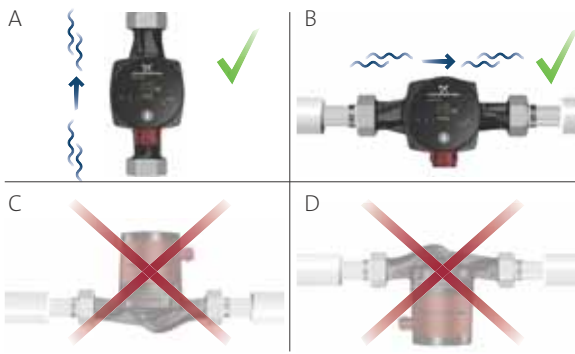


Fig. 2 Control box positions

Always install the pump with a horizontal motor shaft.

- Pump installed correctly in a vertical pipe. See fig. 2 (A).
- Pump installed correctly in a horizontal pipe. See fig. 2 (B).
- Do not install the pump with a vertical motor shaft. See fig. 2 (C and D).

3.3 Control box positions

3.3.1 Positioning of the control box in heating and domestic hot-water systems

You can position the control box so that the plug is positioned at 3, 6 and 9 o'clock. See fig. 3.

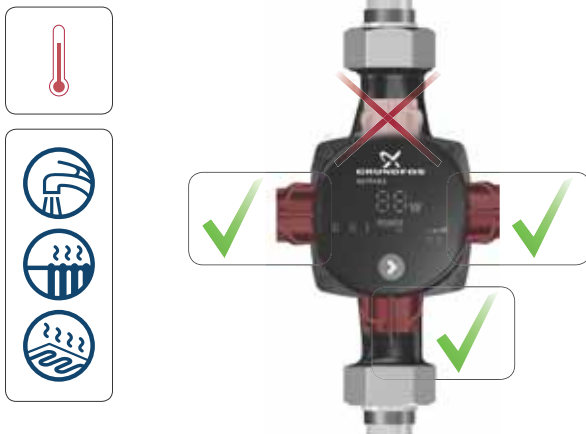


Fig. 3 Control box positions, heating and domestic hot-water systems

3.3.2 Positioning the control box in air-conditioning and cold-water systems

Position the control box so that the plug is pointing downwards. See fig. 4.

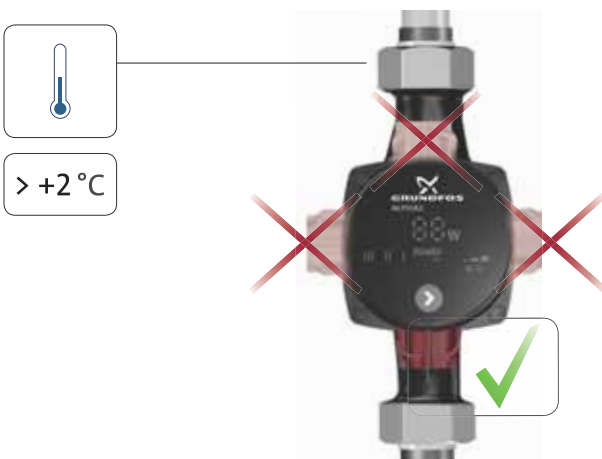


Fig. 4 Control box position, air-conditioning and cold-water systems

3.3.3 Changing the control box position

WARNING

Pressurised system

Minor or moderate personal injury
- Before dismantling the pump, drain the system or close the isolating valves on either side of the pump. The pumped liquid may be scalding hot and under high pressure.



CAUTION

Hot surface

Minor or moderate personal injury
- Position the pump so that persons cannot accidentally come into contact with hot surfaces.



If you change the position of the control box, fill the system with the liquid to be pumped or open the isolating valves.

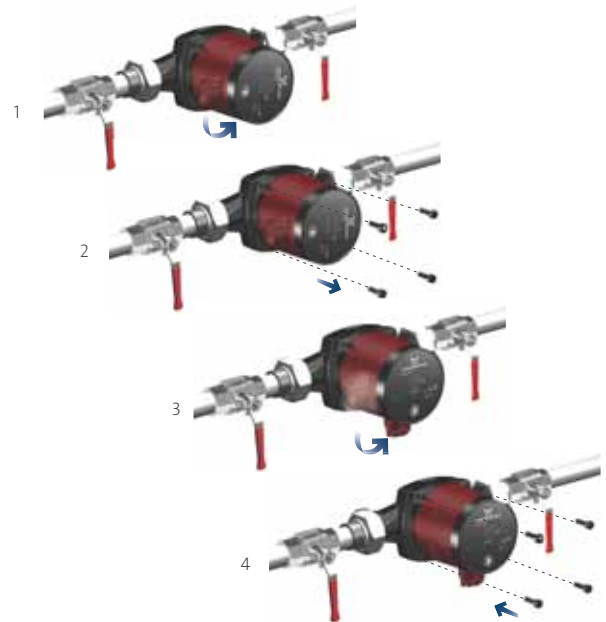


Fig. 5 Changing the control box position

You can turn the control box in steps of 90 °.

1. Remove the four screws.
2. Turn the pump head to the desired position.
3. Insert and cross-tighten the screws.

3.4 Insulating the pump housing



Fig. 6 Insulating the pump housing

You can reduce the heat loss from the pump by insulating the pump housing with the insulating shells supplied with the pump. See fig. 6.



Do not insulate the control box or cover the operating panel.

4. Electrical installation

WARNING

Electric shock

Death or serious personal injury
- Switch off the power supply before starting any work on the product. Make sure that the power supply cannot be accidentally switched on.



WARNING

Electric shock

Death or serious personal injury
- Connect the pump to earth.
Connect the pump to an external main switch with a minimum contact gap of 3 mm in all poles.



WARNING

Electric shock

Death or serious personal injury
- If national legislation requires a Residual-Current Device (RCD) or equivalent in the electrical installation, or if the pump is connected to an electrical installation where an RCD is used as an additional protection, this must be type A or better, due to the nature of the pulsating DC leakage current. The RCD must be marked with the symbol shown below;



Carry out the electrical connection and protection in accordance with local regulations.

- The motor requires no external motor protection.
- Check that the supply voltage and frequency correspond to the values stated on the nameplate. See section [6.4.1 Nameplate](#).
- Connect the pump to the power supply with the plug supplied with the pump. See steps 1 to 7.

4.1 Assembling the plug

Step	Action	Illustration
1	Fit the cable gland and plug cover to the cable. Strip the cable conductors as illustrated.	
2	Connect the cable conductors to the power supply plug.	
3	Bend the cable with the cable conductors pointing upwards.	
4	Pull out the conductor guide plate and throw it away.	
5	Click the plug cover onto the power supply plug.	
6	Screw the cable gland onto the power supply plug.	

Step	Action	Illustration
7	Insert the power supply plug into the male plug in the pump control box.	

4.2 Dismantling the plug

Step	Action	Illustration
1	Loosen the cable gland and remove it from the plug.	
2	Pull off the plug cover while pressing on both sides.	
3	Add the conductor guide plate to loosen all three cable conductors at the same time. If the guide plate is missing, then loosen the cable conductors one by one by pressing a screwdriver gently into the terminal clip.	
4	The plug has now been removed from the power supply plug.	

5. Starting up the product

5.1 Before startup

Do not start the pump until the system has been filled with liquid and vented. Make sure that the required minimum inlet pressure is available at the pump inlet. See section 9. [Technical data](#). For instructions on how to vent the system, see section 5.3 [Venting the pump](#).

5.2 First startup

After installing the product, see section 3. [Installing the product](#), turn on the power supply. The light in the operating panel shows that the power supply has been switched on. See fig. 7.

The pump is factory set to intermediate proportional-pressure curve, PP2.

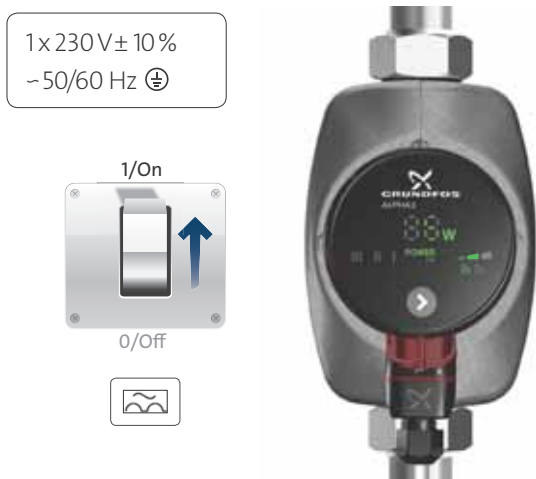


Fig. 7 Starting the pump

5.3 Venting the pump



Fig. 8 Venting the pump

The pump is self-venting through the system. You do not have to vent the pump before startup.

Air in the pump may cause noise. This noise ceases when the pump has run for a few minutes.

You obtain quick venting of the pump by setting the pump to speed III. How fast the pump is vented depends on the system size and design.

When you have vented the pump, i.e. when the noise has ceased, set the pump according to the recommendations. See section 7. [Control functions](#).



The pump must not run dry.

You cannot vent the system through the pump. See section 6. [Product introduction](#).

TM06 9094 4317

TM06 9104 4317

6. Product introduction

6.1 Product description



Fig. 9 Pumped liquids, warnings and operating conditions

ALPHA1 pumps are a complete range of circulator pumps.

6.1.1 Model type

These installation and operating instructions cover ALPHA1 model B. The model type is stated on the packaging and nameplate. See figs 10 and 11.



Fig. 10 Model type on the packaging



Fig. 11 Model type on the nameplate

6.2 Applications

The pump is designed for the circulation of water in heating systems, domestic hot-water systems as well as air-conditioning and cold-water systems.

Cold-water systems are defined as systems where the ambient temperature is higher than the temperature of the pumped liquid. The pump is the best choice for the following systems:

- underfloor heating systems
- one-pipe systems
- two-pipe systems.

The pump is suitable for the following:

- Systems with constant or variable flow rates where you want to optimise the setting of the pump duty point.
- Systems with variable flow-pipe temperature.

TM06 9095 4317

TM06 9106 4317

TM06 9103 4317

6.3 Pumped liquids

In heating systems, the water must meet the requirements of accepted standards on water quality in heating systems, for example the German standard VDI 2035.

The pump is suitable for the following liquids:

- Thin, clean, non-aggressive and non-explosive liquids, not containing solid particles or fibres.
- Cooling liquids, not containing mineral oil.
- Domestic hot water
Maximum: 14 °dH
Maximum: 65 °C
Maximum peak: 70 °C.
For water with a higher degree of hardness, we recommend that you use a direct-coupled TPE pump.
- Softened water.

The kinematic viscosity of water is 1 mm²/s (1 cSt) at 20 °C. If the pump is used for a liquid with a higher viscosity, the hydraulic performance of the pump will be reduced.

Example: 50 % glycol at 20 °C means a viscosity of approx. 10 mm²/s (10 cSt) and a reduction of the pump performance by approx. 15 %.

Do not use additives that can or will disturb the functionality of the pump.

When selecting a pump, take the viscosity of the pumped liquid into consideration.

For more information about the pumped liquids, warnings and operating conditions, see fig. 9.

CAUTION



Flammable material

- Minor or moderate personal injury
- Do not use the pump for flammable liquids, such as diesel oil and petrol.

WARNING



Biological hazard

- Death or serious personal injury
- In domestic hot-water systems, the temperature of the pumped liquid must always be according to local legislation.

CAUTION



Corrosive substance

- Minor or moderate personal injury
- Do not use the pump for aggressive liquids, such as acids and seawater.

6.4 Identification

6.4.1 Nameplate

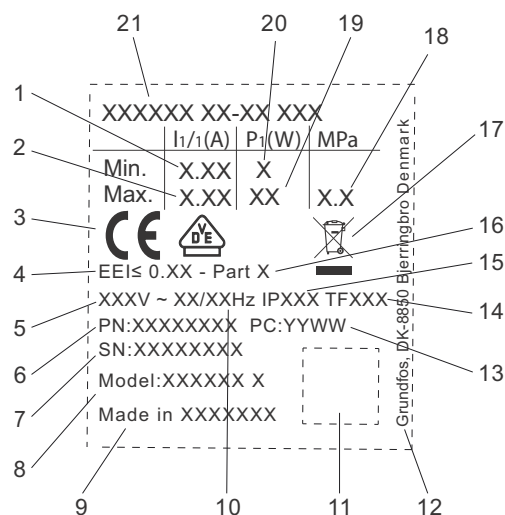


Fig. 12 Nameplate

Pos.	Description
1	Minimum rated current [A]
2	Maximum rated current [A]
3	CE mark and approvals
4	EEI: Energy Efficiency Index
5	Voltage [V]
6	Product number
7	Serial number
8	Pump model
9	Country of origin
10	Frequency [Hz]
11	Data matrix code
12	Grundfos address
	Production code:
13	<ul style="list-style-type: none"> • 1st and 2nd figures: year • 3rd and 4th figures: week
14	Temperature class
15	Enclosure class
16	Part, according to EEI
17	Crossed-out wheeled bin according to EN 50419:2006
18	Maximum system pressure [MPa]
19	Maximum input power P1 [W]
20	Minimum input power P1 [W]
21	Product type

TN07 0628 1118

6.4.2 Type key

Example	ALPHA1	25	-40	N	180
Pump type					
[]: Standard version					
Nominal diameter (DN) of inlet and outlet ports [mm]					
Maximum head [dm]					
[]: Cast-iron pump housing					
N: Stainless-steel pump housing					
Port-to-port length [mm]					

7. Control functions

7.1 Elements on the operating panel



Fig. 13 Operating panel

Pos.	Description
1	Display showing the actual power consumption in watt.
2	Light fields indicating the pump setting. See section 7.3 Light fields indicating the pump setting .
3	Button for selection of pump setting.

7.2 Display

The display (1) is on when you have switched on the power supply.

The display shows the actual pump power consumption in watt. If the pump impeller is rotated, for example when filling the pump with water, sufficient energy can be generated to light up the display even if the power supply has been switched off.

7.3 Light fields indicating the pump setting

The pump has nine performance settings which you can select with the button. See fig. 13 (5).

The pump setting is indicated by nine light fields in the display. See fig. 14.



Fig. 14 Nine light fields

Button presses	Active light fields	Description
0		Intermediate proportional-pressure curve, PP2
1		Highest proportional-pressure curve, PP3
2		Lowest constant-pressure curve, CP1
3		Intermediate constant-pressure curve, CP2
4		Highest constant-pressure curve, CP3
5		Constant curve/constant speed III
6		Constant curve/constant speed II
7		Constant curve/constant speed I
8		Lowest proportional-pressure curve, PP1

For information about the function of the settings, see section 7.5 [Control modes](#).

7.4 Button for selection of pump setting

Every time you press the button , the pump setting is changed. See fig. 13 (5).

A cycle is nine button presses. See section 7.3 [Light fields indicating the pump setting](#).

TM06 9101 4317

TM06 9100 4317

7.5 Control modes

7.5.1 Pump setting for two-pipe heating systems

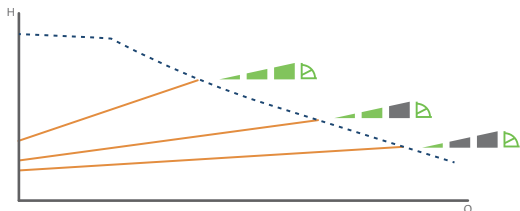
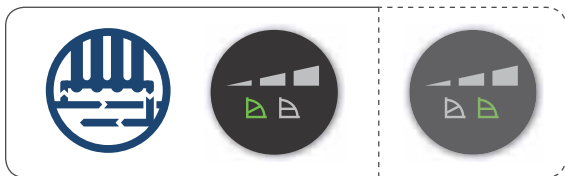


Fig. 15 Selection of pump setting for system type

Recommended and alternative pump settings according to fig. 15:

Heating system	Pump setting	
	Recommended	Alternative
Two-pipe system	Proportional-pressure curve, PP1, PP2 or PP3*	Constant-pressure curve, CP1, CP2 or CP3*

* See section 10.1 Guide to performance curves.

Proportional-pressure curve, PP1, PP2 or PP3

Proportional-pressure control adjusts the pump performance to the actual heat demand in the system. The pump performance follows the selected performance curve, PP1, PP2 or PP3. See fig. 16 where PP2 has been selected. For further information, see section 10.1 Guide to performance curves.

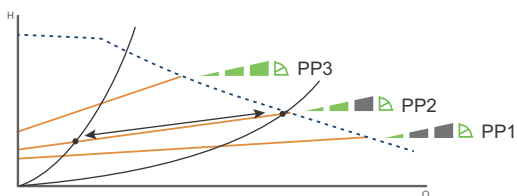


Fig. 16 Three proportional-pressure curves and settings

The selection of the proportional-pressure setting depends on the characteristics of the heating system and the actual heat demand.

7.5.2 Pump setting for one-pipe heating systems

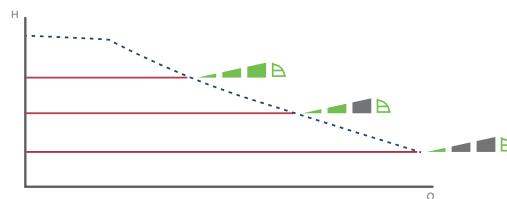
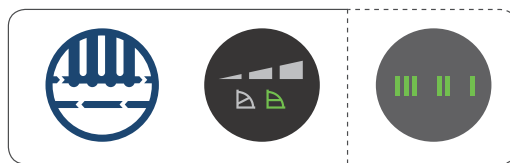


Fig. 17 Selection of pump setting for system type

Recommended and alternative pump settings according to fig. 17:

Heating system	Pump setting	
	Recommended	Alternative
One-pipe system	Constant-pressure curve, CP1, CP2 or CP3*	Constant curve/constant speed, I, II or III*

* See section 10.1 Guide to performance curves.

Constant-pressure curve, CP1, CP2 or CP3

The constant-pressure control adjusts the flow rate to the actual heat demand in the system keeping a constant pressure at the same time. The pump performance follows the selected performance curve, CP1, CP2 or CP3. See fig. 18 where CP1 has been selected. For further information, see section 10.1 Guide to performance curves.

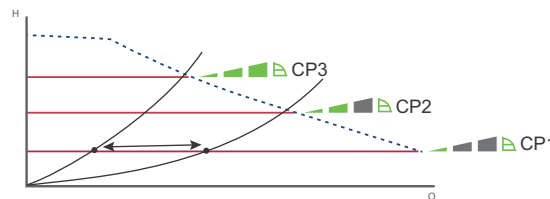


Fig. 18 Three constant-pressure curves and settings

The selection of the constant-pressure setting depends on the characteristics of the heating system and the actual heat demand.

TM06 9102 4317

TM06 9102 4317

TM07 0087 4117

TM07 0086 4117

7.5.3 Pump setting for underfloor heating systems

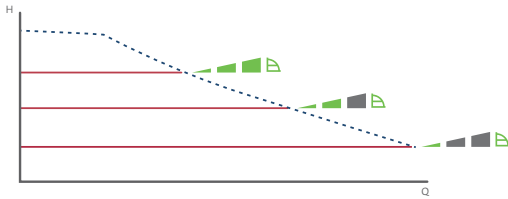
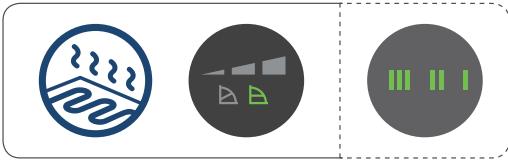


Fig. 19 Selection of pump setting for system type

Recommended and alternative pump settings according to fig. 19:

System type	Pump setting	
	Recommended	Alternative
Underfloor heating	Constant-pressure curve, CP1, CP2 or CP3*	Constant curve/constant speed, I, II or III

* See section 10.1 Guide to performance curves.

Constant-pressure curve, CP1, CP2 or CP3

The constant-pressure control adjusts the flow rate to the actual heat demand in the system keeping a constant pressure at the same time. The pump performance follows the selected performance curve, CP1, CP2 or CP3. See fig. 20 where CP1 has been selected. For further information, see section 10.1 Guide to performance curves.

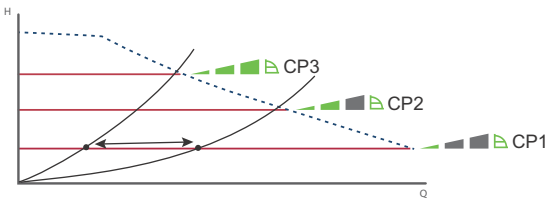


Fig. 20 Three constant-pressure curves and settings

The selection of the constant-pressure setting depends on the characteristics of the heating system and the actual heat demand.

7.5.4 Pump setting for domestic hot-water systems

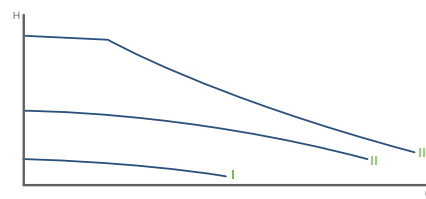


Fig. 21 Selection of pump setting for system type

Recommended and alternative pump settings according to fig. 21:

System type	Pump setting	
	Recommended	Alternative
Domestic hot water	Constant curve/constant speed, I, II or III	Constant-pressure curve, CP1, CP2 or CP3*

* See section 10.1 Guide to performance curves.

Constant curve/constant speed, I, II or III

At constant-curve/constant-speed operation, the pump runs at a constant speed, independently of the actual flow rate demand in the system. The pump performance follows the selected performance curve, I, II or III. See fig. 22 where II has been selected. For further information, see section 10.1 Guide to performance curves.

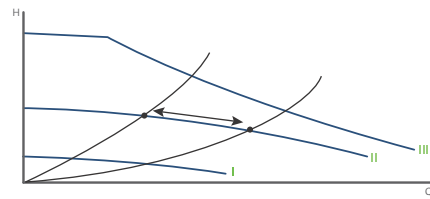


Fig. 22 Three constant-curve and constant-speed settings

The selection of the constant-curve and constant-speed setting depends on the characteristics of the heating system and the number of taps likely to be opened at the same time.

7.5.5 Changing from recommended to alternative pump setting

Heating systems are relatively slow systems that cannot be set to the optimum operation within minutes or hours.

If the recommended pump setting does not give the desired distribution of heat in the rooms of the house, change the pump setting to the shown alternative.

7.6 Pump performance

Relation between pump setting and pump performance.

Figure 23 shows the relation between pump setting and pump performance by means of curves. See also section 10. [Performance curves](#).

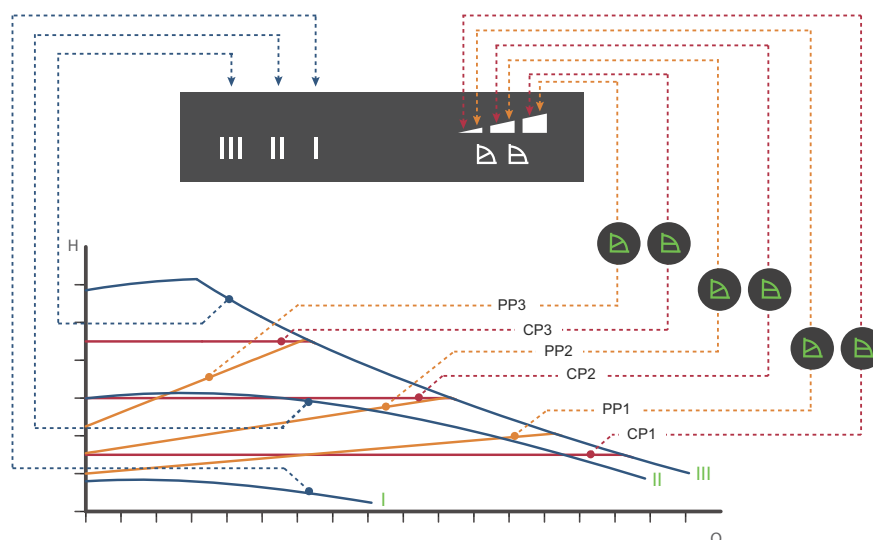


Fig. 23 Pump setting in relation to pump performance

Setting	Pump curve	Function
PP1	Lowest proportional-pressure curve	The duty point of the pump will move up or down on the lowest proportional-pressure curve, depending on the heat demand. See fig. 23. The head is reduced at falling heat demand and increased at rising heat demand.
PP2	Intermediate proportional-pressure curve	The duty point of the pump will move up or down on the intermediate proportional-pressure curve, depending on the heat demand. See fig. 23. The head is reduced at falling heat demand and increased at rising heat demand.
PP3	Highest proportional-pressure curve	The duty point of the pump will move up or down on the highest proportional-pressure curve, depending on the heat demand. See fig. 23. The head is reduced at falling heat demand and increased at rising heat demand.
CP1	Lowest constant-pressure curve	The duty point of the pump will move out or in on the lowest constant-pressure curve, depending on the heat demand in the system. See fig. 23. The head is kept constant, irrespective of the heat demand.
CP2	Intermediate constant-pressure curve	The duty point of the pump will move out or in on the intermediate constant-pressure curve, depending on the heat demand in the system. See fig. 23. The head is kept constant, irrespective of the heat demand.
CP3	Highest constant-pressure curve	The duty point of the pump will move out or in on the highest constant-pressure curve, depending on the heat demand in the system. See fig. 23. The head is kept constant, irrespective of the heat demand.
III	Speed III	The pump runs on a constant curve which means that it runs at a constant speed. In speed III, the pump is set to run on the maximum curve under all operating conditions. See fig. 23. You obtain quick venting of the pump by setting the pump to speed III for a short period. See section 5.3 Venting the pump .
II	Speed II	The pump runs on a constant curve which means that it runs at a constant speed. In speed II, the pump is set to run on the intermediate curve under all operating conditions. See fig. 23.
I	Speed I	The pump runs on a constant curve which means that it runs at a constant speed. In speed I, the pump is set to run on the minimum curve under all operating conditions. See fig. 23.

TM05 2771 2817

8. Fault finding the product

WARNING

Electric shock



Death or serious personal injury

- Switch off the power supply before starting any work on the product. Make sure that the power supply cannot be accidentally switched on.

WARNING

Pressurised system



Minor or moderate personal injury

- Before dismantling the pump, drain the system or close the isolating valves on either side of the pump. The pumped liquid may be scalding hot and under high pressure.

High-torque start

If the shaft is blocked and you cannot start the pump, the display indicates the alarm "E 1 - - -", with a delay of 20 minutes.

The pump attempts to restart until the pump is powered off.

During the start attempts, the pump vibrates due to the high-torque load.

Fault	Operating panel	Cause	Remedy	
1. The pump does not run.	Light off.	a) A fuse in the installation is blown.	Replace the fuse.	
		b) The current-operated or voltage-operated circuit breaker has tripped.	Cut in the circuit breaker.	
		c) The pump is defective.	Replace the pump.	
		Changes between "- -" and "E 1".	a) The rotor is blocked.	Remove the impurities.
		Changes between "- -" and "E 2".	a) Insufficient supply voltage.	Make sure that the supply voltage falls within the specified range.
	Changes between "- -" and "E 3".	a) Electrical fault.	Replace the pump.	
2. Noise in the system.	No warning is indicated on the display.	a) Air in the system.	Vent the system.	
		b) The flow rate is too high.	Reduce the suction head.	
3. Noise in the pump.	No warning is indicated on the display.	a) Air in the pump.	Let the pump run. The pump vents itself over time. See section 5.3 Venting the pump .	
		b) The inlet pressure is too low.	Increase the inlet pressure, or make sure that the air volume in the expansion tank is sufficient, if installed.	
4. Insufficient heat.	No warning is indicated on the display.	a) The pump performance is too low.	Change the pump setting to increase the pump performance. See 7.5.5 Changing from recommended to alternative pump setting .	

9. Technical data

9.1 Data and operating conditions

Supply voltage	1 x 230 V ± 10 %, 50 or 60 Hz, PE	
Motor protection	The pump requires no external motor protection.	
Enclosure class	IPX4D	
Insulation class	F	
Relative humidity	Maximum 95 % RH	
System pressure	Maximum 1.0 MPa, 10 bar, 102 m head	
Inlet pressure	Liquid temperature	Minimum inlet pressure
	≤ 75 °C	0.005 MPa, 0.05 bar, 0.5 m head
	90 °C	0.028 MPa, 0.28 bar, 2.8 m head
	110 °C	0.108 MPa, 1.08 bar, 10.8 m head
EMC (electromagnetic compatibility)	EMC Directive (2014/30/EU). Standards used:	
	EN 55014-1:2006/A1:2009/A2:2011	
	EN 55014-2:2015	
	EN 61000-3-2:2014	
	EN 61000-3-3:2013	
Sound-pressure level	The sound-pressure level of the pump is lower than 43 dB(A).	
Ambient temperature	0-40 °C	
Temperature class	TF110 to EN 60335-2-51	
Surface temperature	The maximum surface temperature will not exceed 125 °C.	
Liquid temperature	2-110 °C	
Specific EEI values	EEI ≤ 0.20	

To avoid condensation in the control box and stator, the liquid temperature must always be higher than the ambient temperature.

Ambient temperature [°C]	Liquid temperature	
	Min. [°C]	Max. [°C]
0	2	110
10	10	110
20	20	110
30	30	110
35	35	90
40	40	70



The ALPHA1 pump can, however, run at ambient temperatures higher than the liquid temperature if the plug connection in the pump head is pointing downwards.

9.2 Dimensions

Dimensional sketches and table of dimensions.

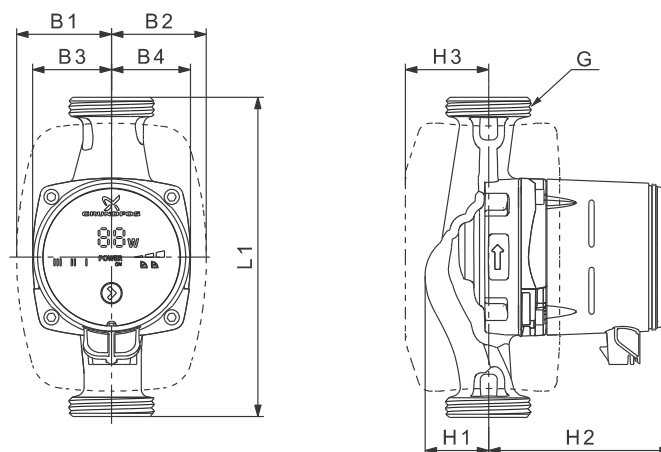


Fig. 24 ALPHA1 model B

TM07 0102 4217

Pump type	Dimensions								
	L1	B1	B2	B3	B4	H1	H2	H3	G
ALPHA1 15-40	130	54	54	44	44	36	104	47	G1
ALPHA1 15-50	130	54	54	44	44	36	104	47	G1
ALPHA1 15-50 N*	130	54	54	44	44	37	104	47	G1 1/2
ALPHA1 15-60	130	54	54	44	44	36	104	47	G1
ALPHA1 15-50/60*	130	54	54	44	44	36	104	47	G1 1/2
ALPHA1 15-80	130	54	54	44	44	36	104	47	G1
ALPHA1 25-40	130	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-40 N	130	54	54	44	44	37	104	47	G1 1/2
ALPHA1 25-40	180	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-40 N	180	54	54	44	44	37	104	47	G1 1/2
ALPHA1 25-50	130	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-50 N	130	54	54	44	44	37	104	47	G1 1/2
ALPHA1 25-50	180	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-50 N	180	54	54	44	44	37	104	47	G1 1/2
ALPHA1 25-60	130	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-60 N	130	54	54	44	44	37	104	47	G1 1/2
ALPHA1 25-60	180	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-60 N	180	54	54	44	44	37	104	47	G1 1/2
ALPHA1 25-80	130	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-80 N	130	54	54	44	44	37	104	47	G1 1/2
ALPHA1 25-80	180	54	54	44	44	36	104	47	G1 1/2
ALPHA1 25-80 N	180	54	54	44	44	37	104	47	G1 1/2
ALPHA1 32-40	180	54	54	44	44	36	104	47	G2
ALPHA1 32-50	180	54	54	44	44	36	104	47	G2
ALPHA1 32-60	180	54	54	44	44	36	104	47	G2
ALPHA1 32-80	180	54	54	44	44	36	104	47	G2

* Only available in UK

Not all pump types are available in all countries.

10. Performance curves

10.1 Guide to performance curves

Each pump setting has its own performance curve.

A power curve, P1, belongs to each performance curve. The power curve shows the pump power consumption in watt at a given performance curve.

The P1 value corresponds to the value that you can read from the pump display. See fig. 25.

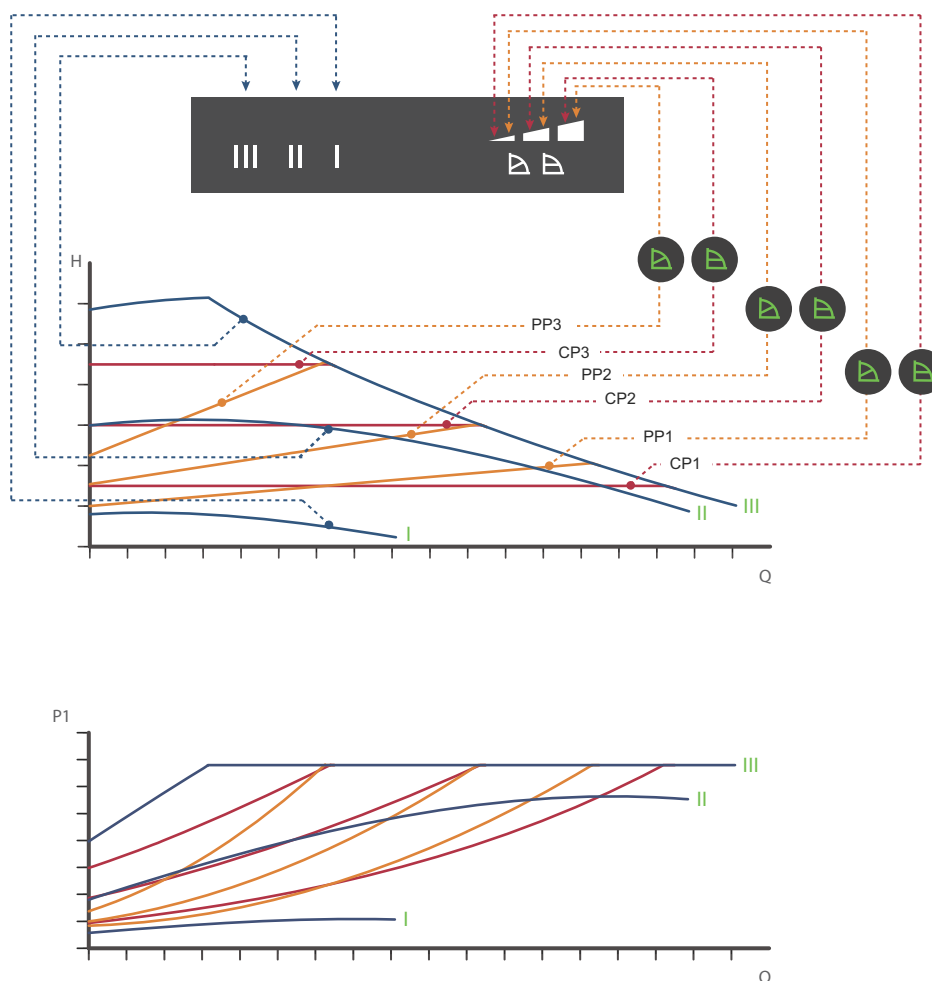


Fig. 25 Performance curves in relation to pump setting

Setting	Pump curve
PP1	Lowest proportional-pressure curve
PP2	Intermediate proportional-pressure curve
PP3	Highest proportional-pressure curve
CP1	Lowest constant-pressure curve
CP2	Intermediate constant-pressure curve
CP3	Highest constant-pressure curve
III	Constant curve or constant speed III
II	Constant curve or constant speed II
I	Constant curve or constant speed I

For further information about pump settings, see section [7. Control functions](#)

10.2 Curve conditions

The guidelines below apply to the performance curves on the following pages:

- Test liquid: airless water.
- The curves apply to a density of 983.2 kg/m^3 and a liquid temperature of $60 \text{ }^\circ\text{C}$.
- All curves show average values and must not be used as guarantee curves. If a specific minimum performance is required, individual measurements must be made.
- The curves for speeds I, II and III are marked.
- The curves apply to a kinematic viscosity of $0.474 \text{ mm}^2/\text{s}$ (0.474 cSt).
- Curves are obtained according to EN 16297.

10.3 Performance curves, ALPHA1, XX-40 (N)

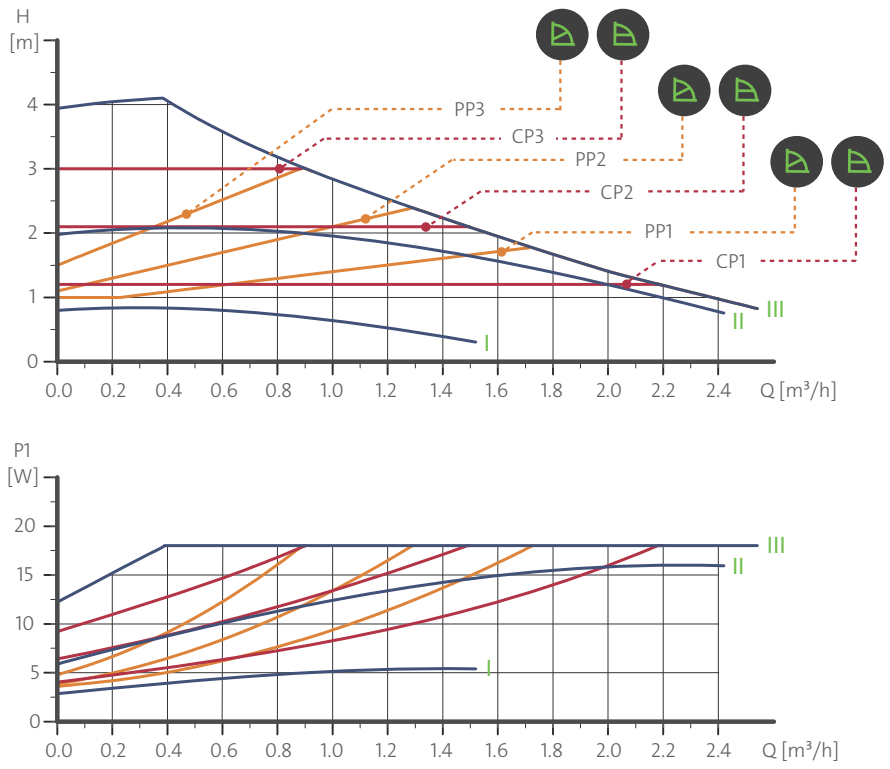


Fig. 26 ALPHA1, XX-40

Setting	P1 [W]	I _{1/1} [A]
Min.	3	0.04
Max.	18	0.18

TM07 0056 4017

10.4 Performance curves, ALPHA1, XX-50 (N)

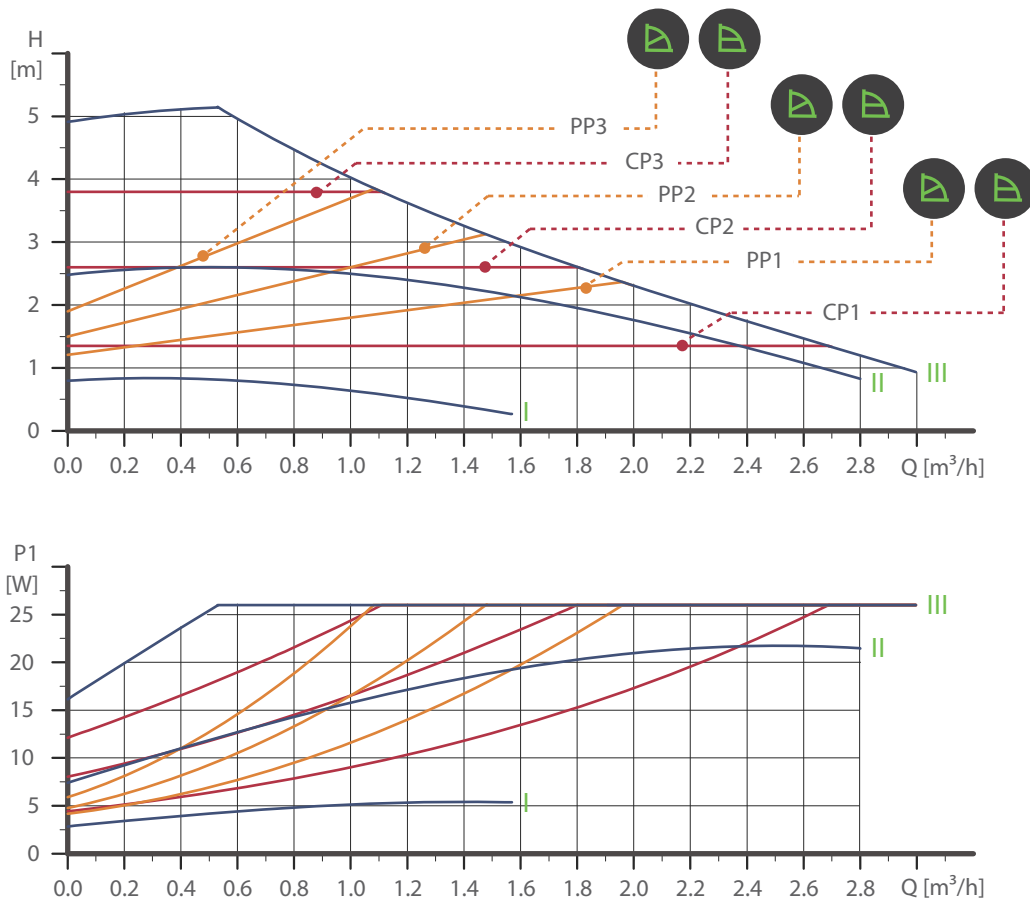


Fig. 27 ALPHA1, XX-50

Setting	P1 [W]	I _{1/1} [A]
Min.	3	0.04
Max.	26	0.24

TM07 0057 4017

10.5 Performance curves, ALPHA1, XX-60 (N), XX-50/60

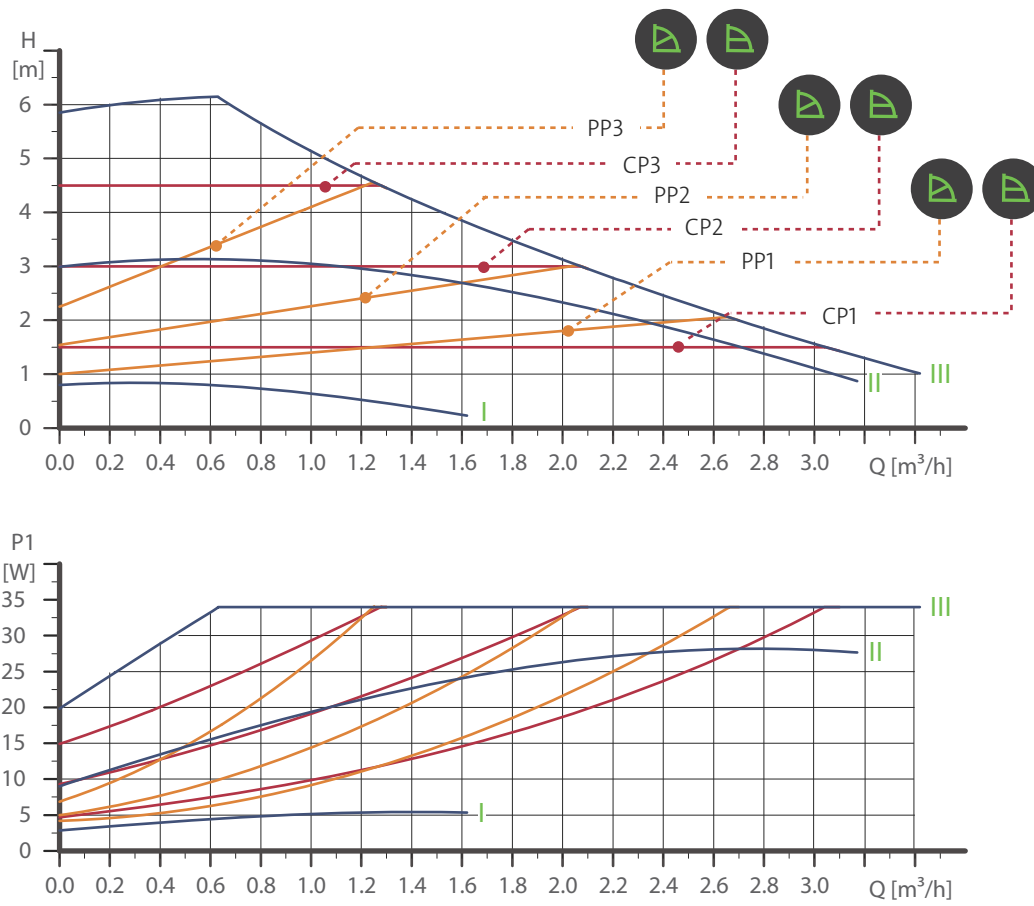


Fig. 28 ALPHA1, XX-60, XX-50/60

Setting	P1 [W]	$I_{1/1}$ [A]
Min.	3	0.04
Max.	34	0.32

TM07 0058 4017

10.6 Performance curves, ALPHA1, XX-80 (N)

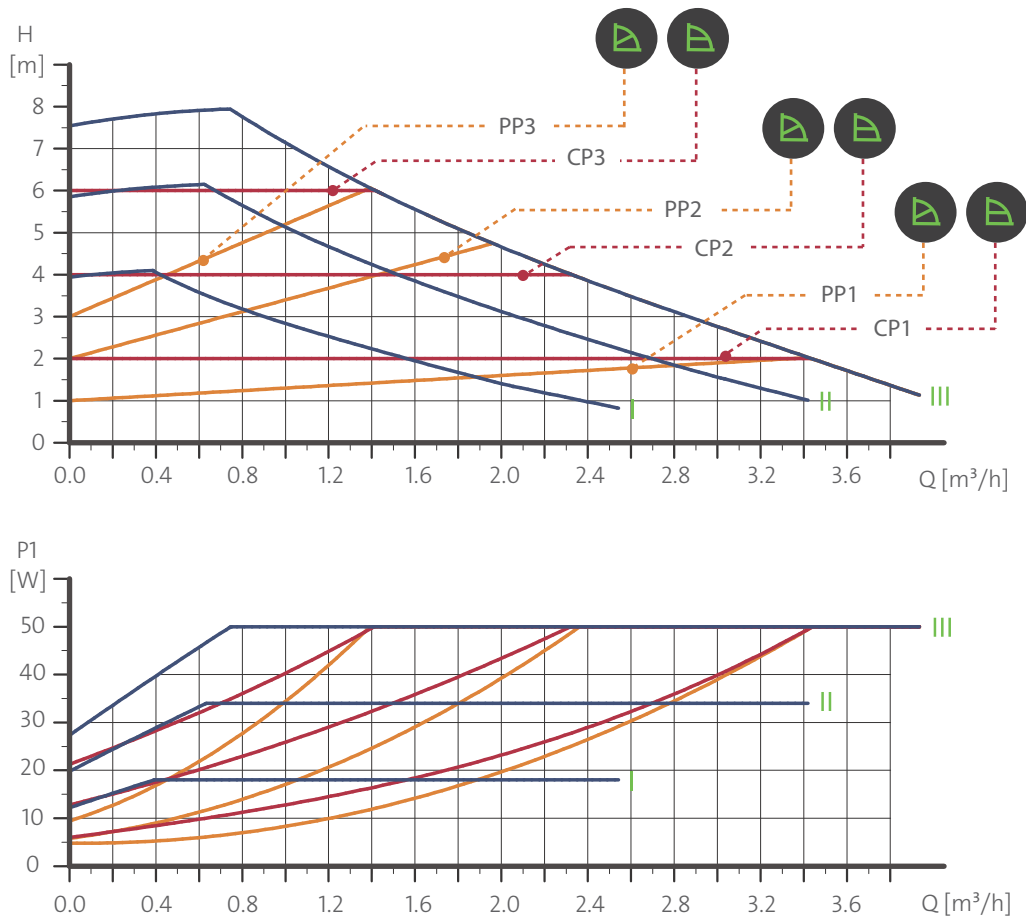















Fig. 29 ALPHA1, XX-80

Setting	P1 [W]	$I_{1/1}$ [A]
Min.	3	0.04
Max.	50	0.44

TN07 0057 4017

11. Accessories

11.1 Unions

		Product numbers, unions													
ALPHA1	Connection	Union nut with internal threads			Union nut with external threads		Ball valve with internal threads			Ball valve with compression fitting		Union nut with soldering fitting			
															
		3/4	1	1 1/4	1	1 1/4	3/4	1	1 1/4	∅22	∅28	∅18	∅22	∅28	∅42
25-xx	G 1 1/2	529921	529922	529821	529925	529924									
25-xx N		529971	529972					519805	519806	519807	519808	519809	529977	529978	529979
32-xx	G 2		509921	509922											
32-xx N				509971											

Note: The product numbers are always for one complete set, incl. gaskets.

The product numbers for the very standard sizes are printed in bold.

When ordering for UK 15-xx versions, use product numbers for 25-xx (G 1 1/2).

G-threads have a cylindrical form in accordance with the EN ISO 228-1 standard and are not sealing the thread; it requires a flat gasket. You can only screw male G-threads (cylindrical) into female G-threads. The G-threads are standard thread on the pump housing.

R-threads are tapered external threads in accordance with the EN 10226-2 standard.

Rc- or Rp-threads are internal threads with either tapered or cylindrical (parallel) threads. You can screw male R-threads (conical) into female Rc- or Rp-threads. See fig. 30.

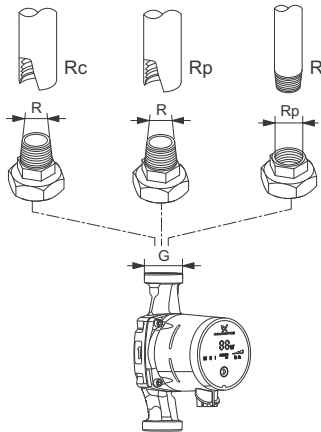


Fig. 30 Examples of thread types and combinations

11.2 Insulating shells

The pump is supplied with two insulating shells. The insulating shells, which are tailored to the individual pump type, enclose the entire pump housing. The insulating shells are easy to fit around the pump. See fig. 31.

Pump type	Product number
ALPHA1 XX-XX 130	98091786
ALPHA1 XX-XX 180	98091787



TM06 9093 4317

Fig. 31 Insulating shells

11.3 ALPHA plugs



TM06 5823 0216

Pos.	Description	Product number
1	ALPHA straight plug, standard plug connector, complete	98284561
2	ALPHA angle plug, standard angle plug connection, complete	98610291
3	ALPHA plug, 90 ° bend to the left, including 4 m cable	96884669
*	ALPHA plug, 90 ° bend to the left, including 1 m cable and integrated NTC protection resistor	97844632

* This special cable with an active built-in NTC protection circuit reduces possible inrush currents. To be used in case of, for instance, poor quality of relay components that are sensitive to inrush current.

12. Disposing of the product

WARNING

Magnetic field



Death or serious personal injury

- Persons with pacemakers dismantling this product must exercise caution when handling the magnetic materials embedded in the rotor.

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheeled bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at www.grundfos.com/product-recycling.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and**Slovakia s.r.o.**

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumpat AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0)1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: Ismart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses Revised 14.03.2018

99352881 1218

ECM: 1250580

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved. © 2018 Grundfos Holding A/S, all rights reserved.